

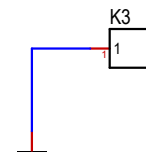
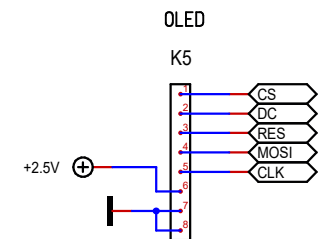
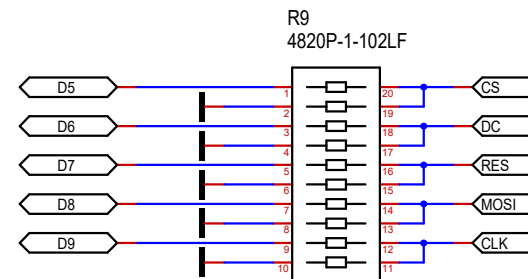
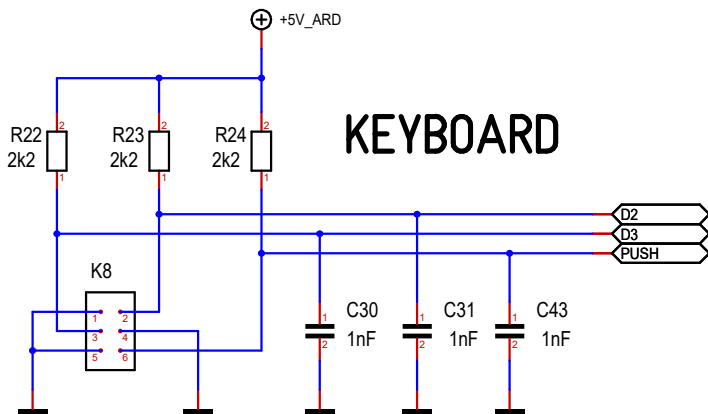
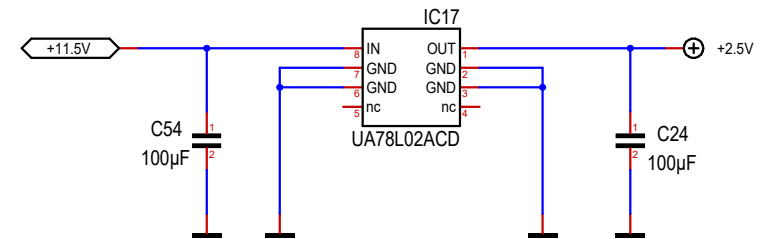
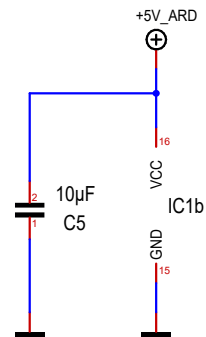
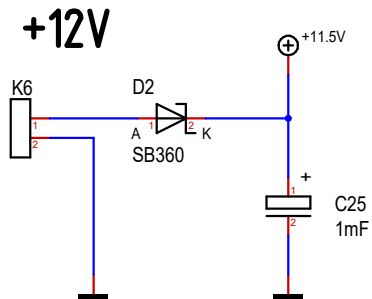
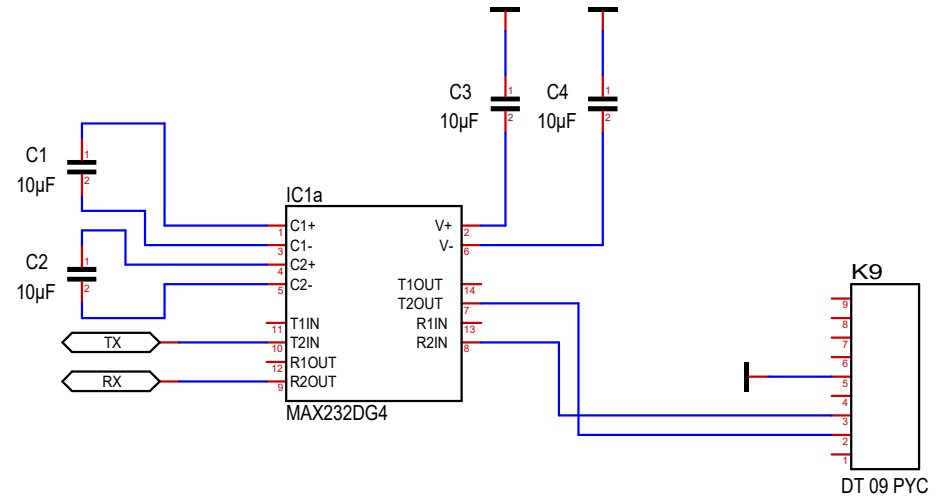
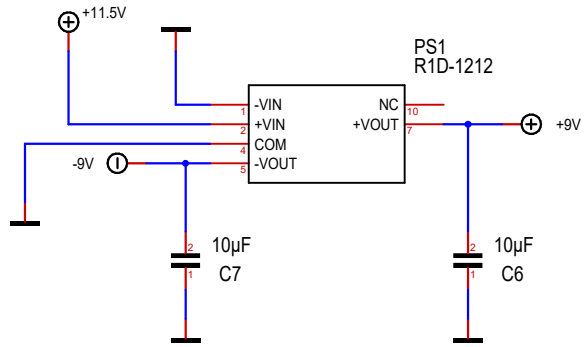


I2C Pull-Up is on Sensor.  
 If there is no communication on the bus and A0 reads 0x000 means that there is NO Sensor.

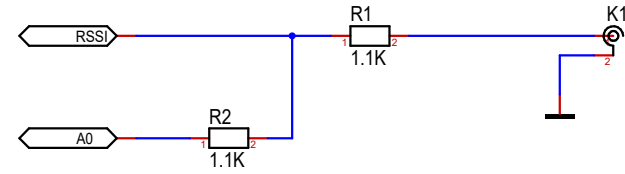

Massstab	101.39%	Alexander C. Frank	Blatt : Arduino
Änderung	14.06.2022	11:00	<b>ETH</b> QUANTUMOPTICS
Ausgabe	14.07.2022	18:47	
Datei	Levelmod-2.T3001		

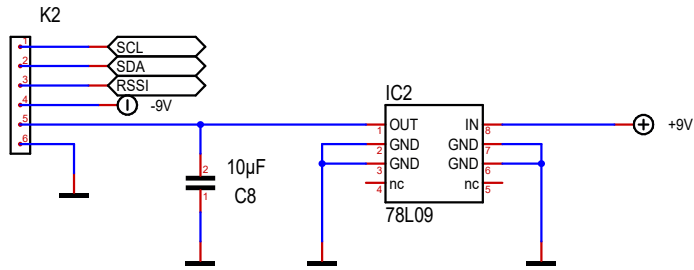

Massstab	101.39%	Alexander C. Frank	Blatt :RS232 / Power Supply Sensor
Änderung	14.06.2022	11:00	<b>ETH</b> QUANTUMOPTICS
Ausgabe	14.07.2022	18:47	
Datei	Levelmod-2.T3001		